

Register your product and get support at
www.philips.com/welcome

PhotoFrame


 

SPF1307






SPF1327





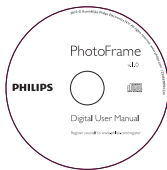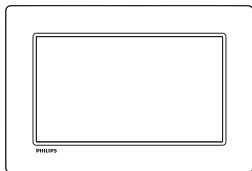


EN Quick start guide

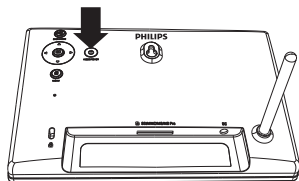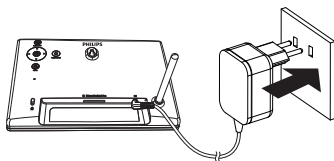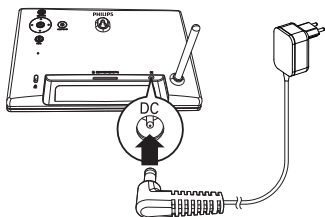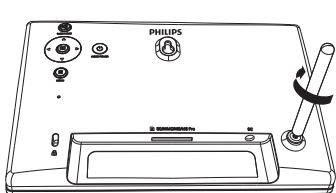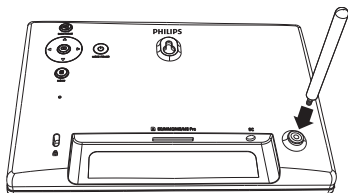PHILIPS










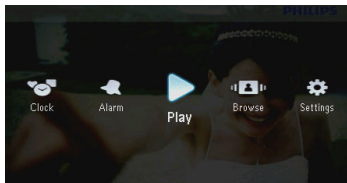

Know these buttons

Control buttons	Function
	- Hold to turn on/off the PhotoFrame - Press to switch mode: slideshow/clock/calendar
	- Press to go back - Hold to access the home screen
	- Press to enter/exit a menu
	- Press to select the previous/next/right/left option
	- Press to play/pause slideshow - Press to confirm a selection


Startup



- 1 Connect the power cord to the DC socket of the PhotoFrame and then to a power supply socket.
↳ A few seconds later, the PhotoFrame turns on automatically.
- 2 Press ▲/▼ to select a language, and then press .
- 3 Press ▲/▼/◀/▶ to set time and date, and then press .
- ↳ The home screen is displayed.
- 4 To start slideshow, select **[Play]** and then press .

 - To pause slideshow, press .
 - To resume slideshow, press  again.
 - To turn off the PhotoFrame, hold .

Transfer/Display photos via storage device


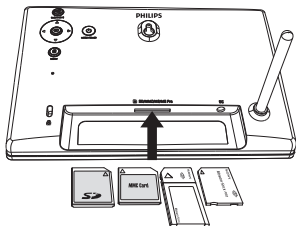



Media type supported:

- Photo (JPEG)


Storage device supported:

- SD
- SDHC
- MMC
- MMC Plus
- MS
- MS Pro Duo (with adaptor)


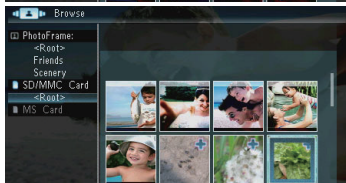
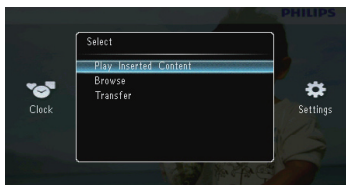


- 1 Insert a storage device.
- 2 Select an option, and then press  to confirm.
- 3 Follow the on screen instructions to:
 - Play photos
 - Browse photos
 - Transfer photos





Select a clock/calendar

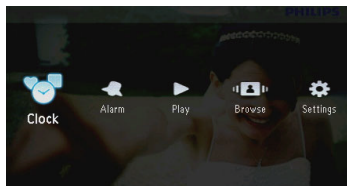



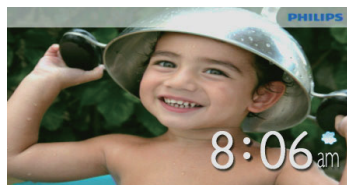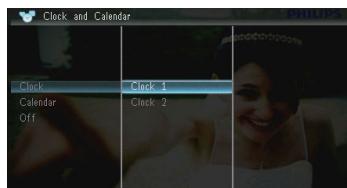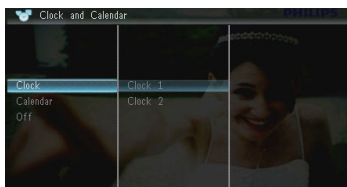



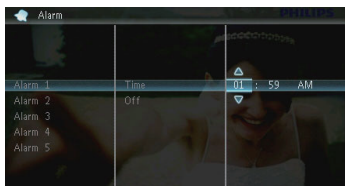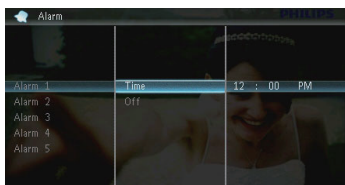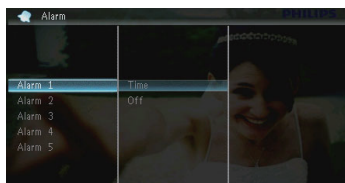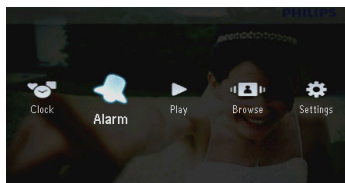

- 1 In the home screen, select **[Clock]** and then press **[▶]**.
- 2 Select **[Clock]** / **[Calendar]**, and then press **[▶]**.
- 3 Select a clock/calendar, and then press **[▶]**.
↳ The clock/calendar is displayed.



Create an alarm



- 1 In the home screen, select **[Alarm]** and then press .
- 2 Select an alarm, and then press .
- 3 Select **[Time]**, and then press .
 - To turn off the alarm, select **[Off]** and then press .
- 4 Press // to set time, and then press .



© Royal Philips Electronics N.V. 2010
All rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

V1.0

Printed in China

